

# TITAN

A L U M I N I U M

## Syncing the LK – RS002 rain sensor to your opening flat rooflight

- On the main rooflight control box press the up button to start operation



LK-MR531/533/535/536

- Press and hold centre stop button until the light flashes



LK-MR531/533/535/536

- Using a small, pointed item press the sensor button on the back of the sensor until it flashes 3 times (a light will flash from inside the sensor)



- Hold hand over the surface of the rain sensor and the rooflight should close and the sensor should be paired. The sensor should then be placed outside where it can easily be accessed.